


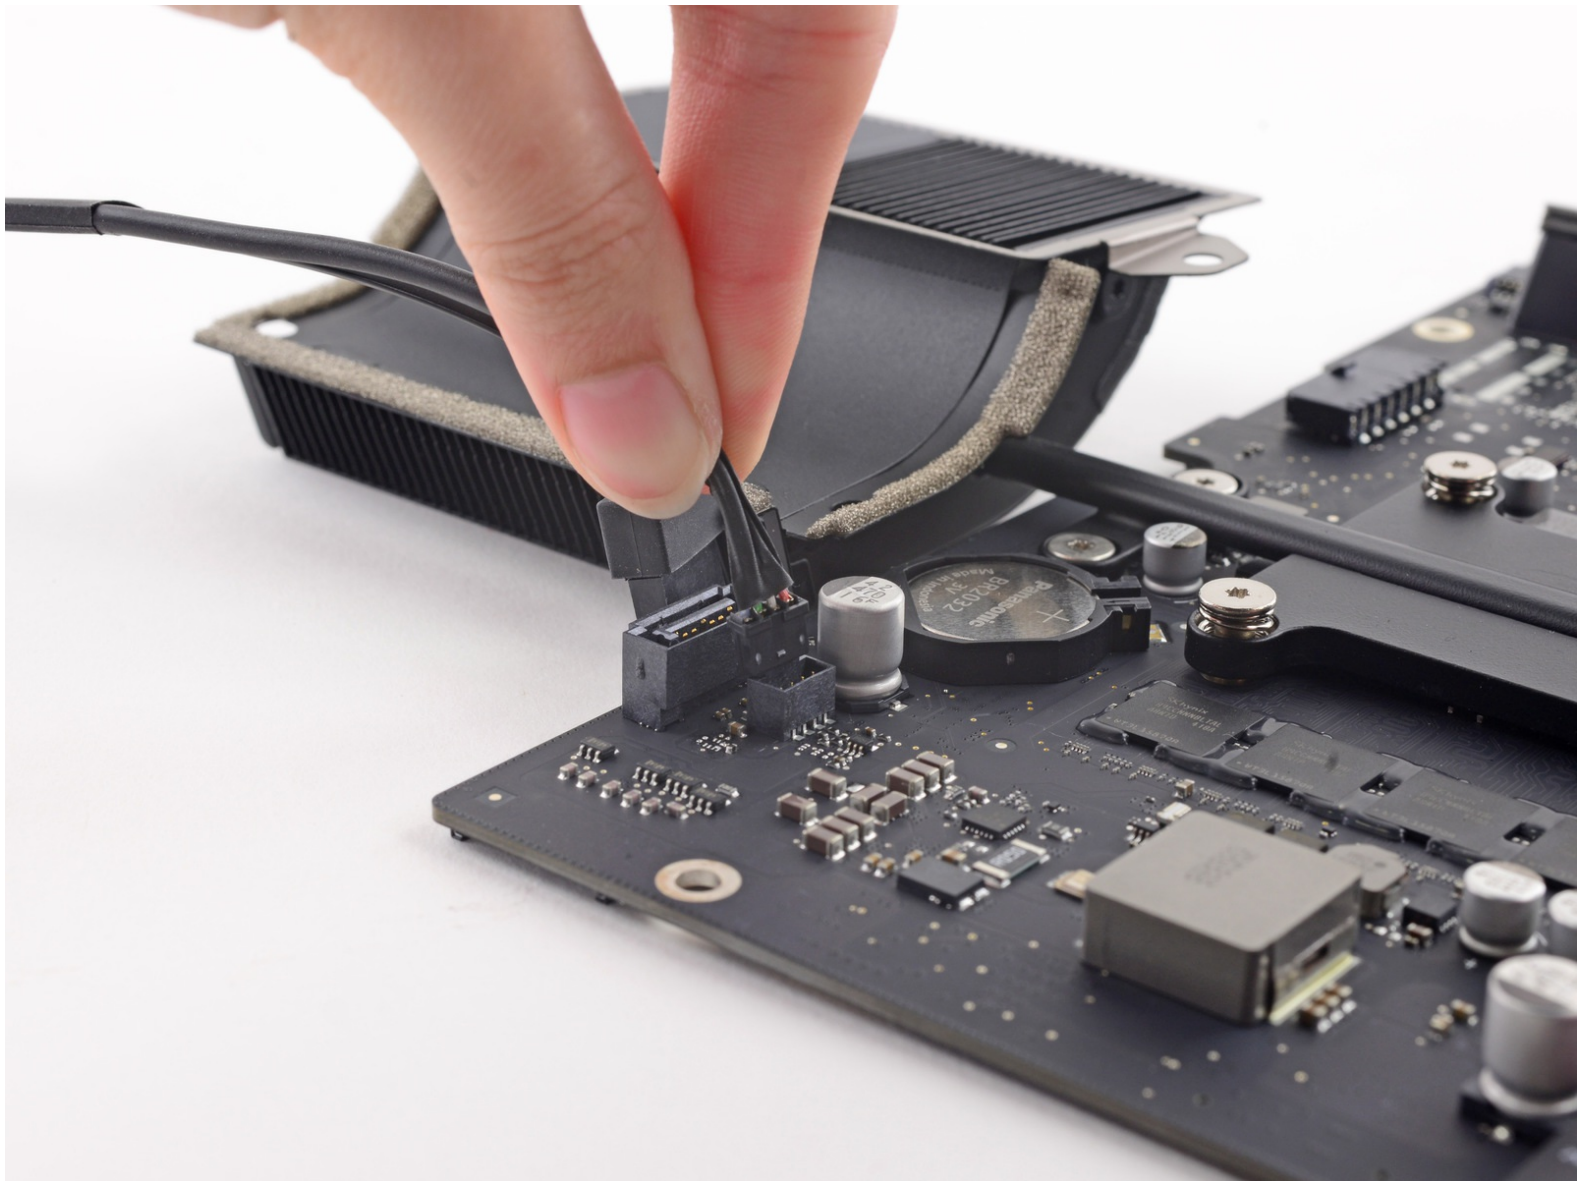

iMac Intel 21.5" EMC 2805 SATA Data and Power Cables Replacement

Prereq for logic board.


Written By: Walter Galan



INTRODUCTION

Prereq for logic board.


Step 1 — SATA Data and Power Cables

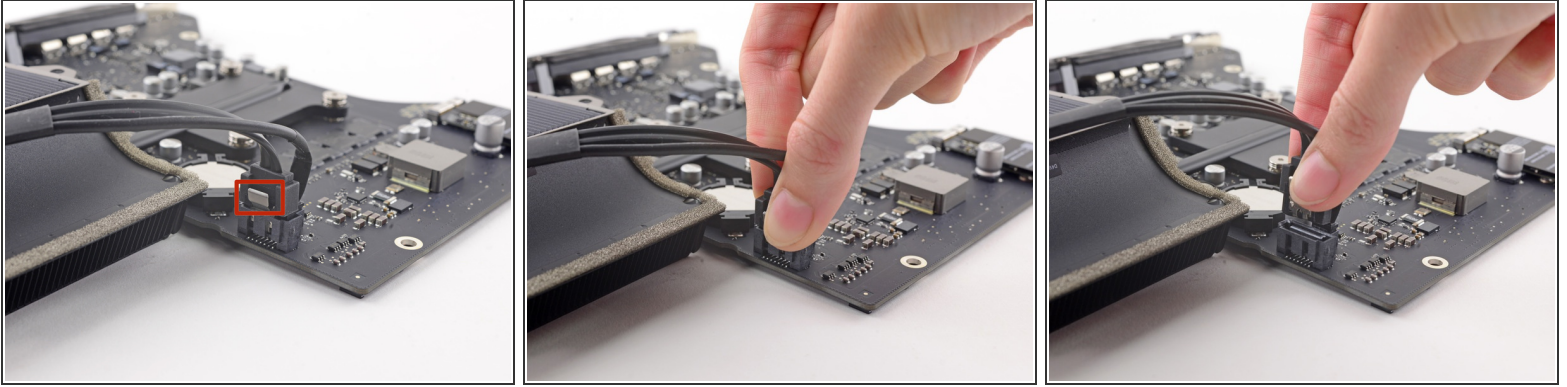

i The SATA data connector has a clip that must be pressed to allow removal.

- While pressing on the clip with your thumb, lift and disconnect the SATA data connector from its socket on the logic board.

Step 2

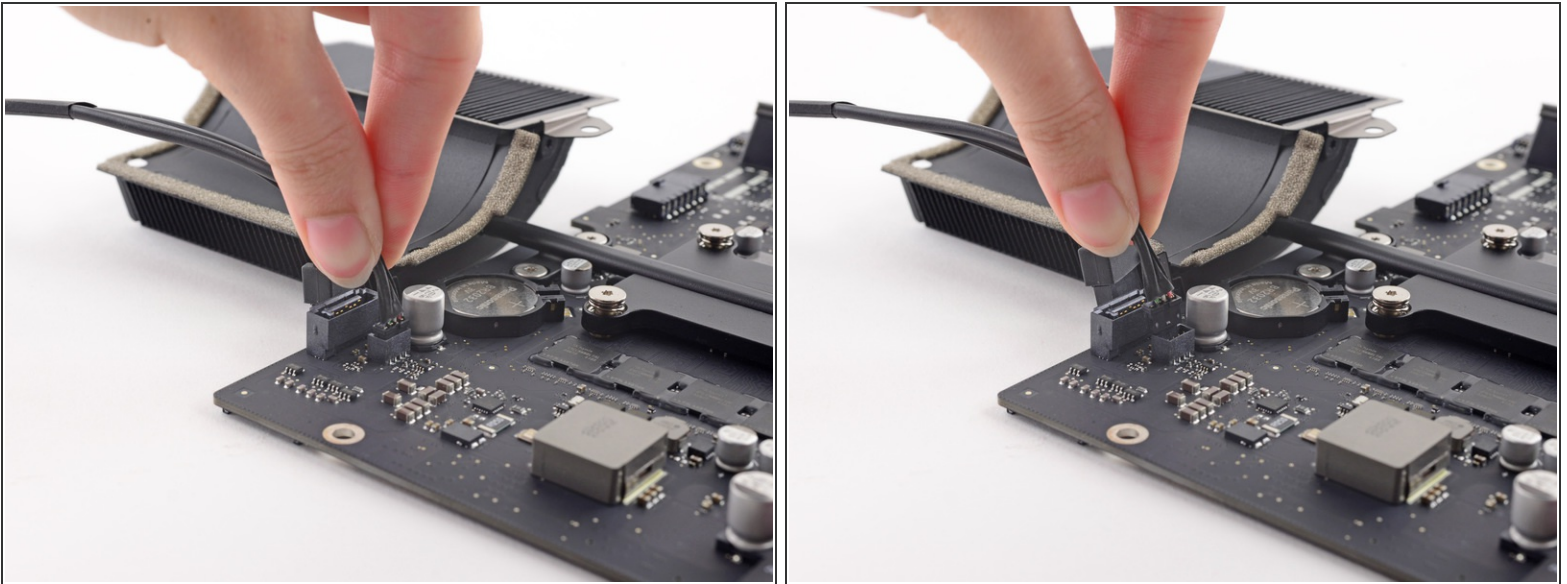

- Grasp the hard drive power connector and gently pull it out of its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 05:20:05 PM.